
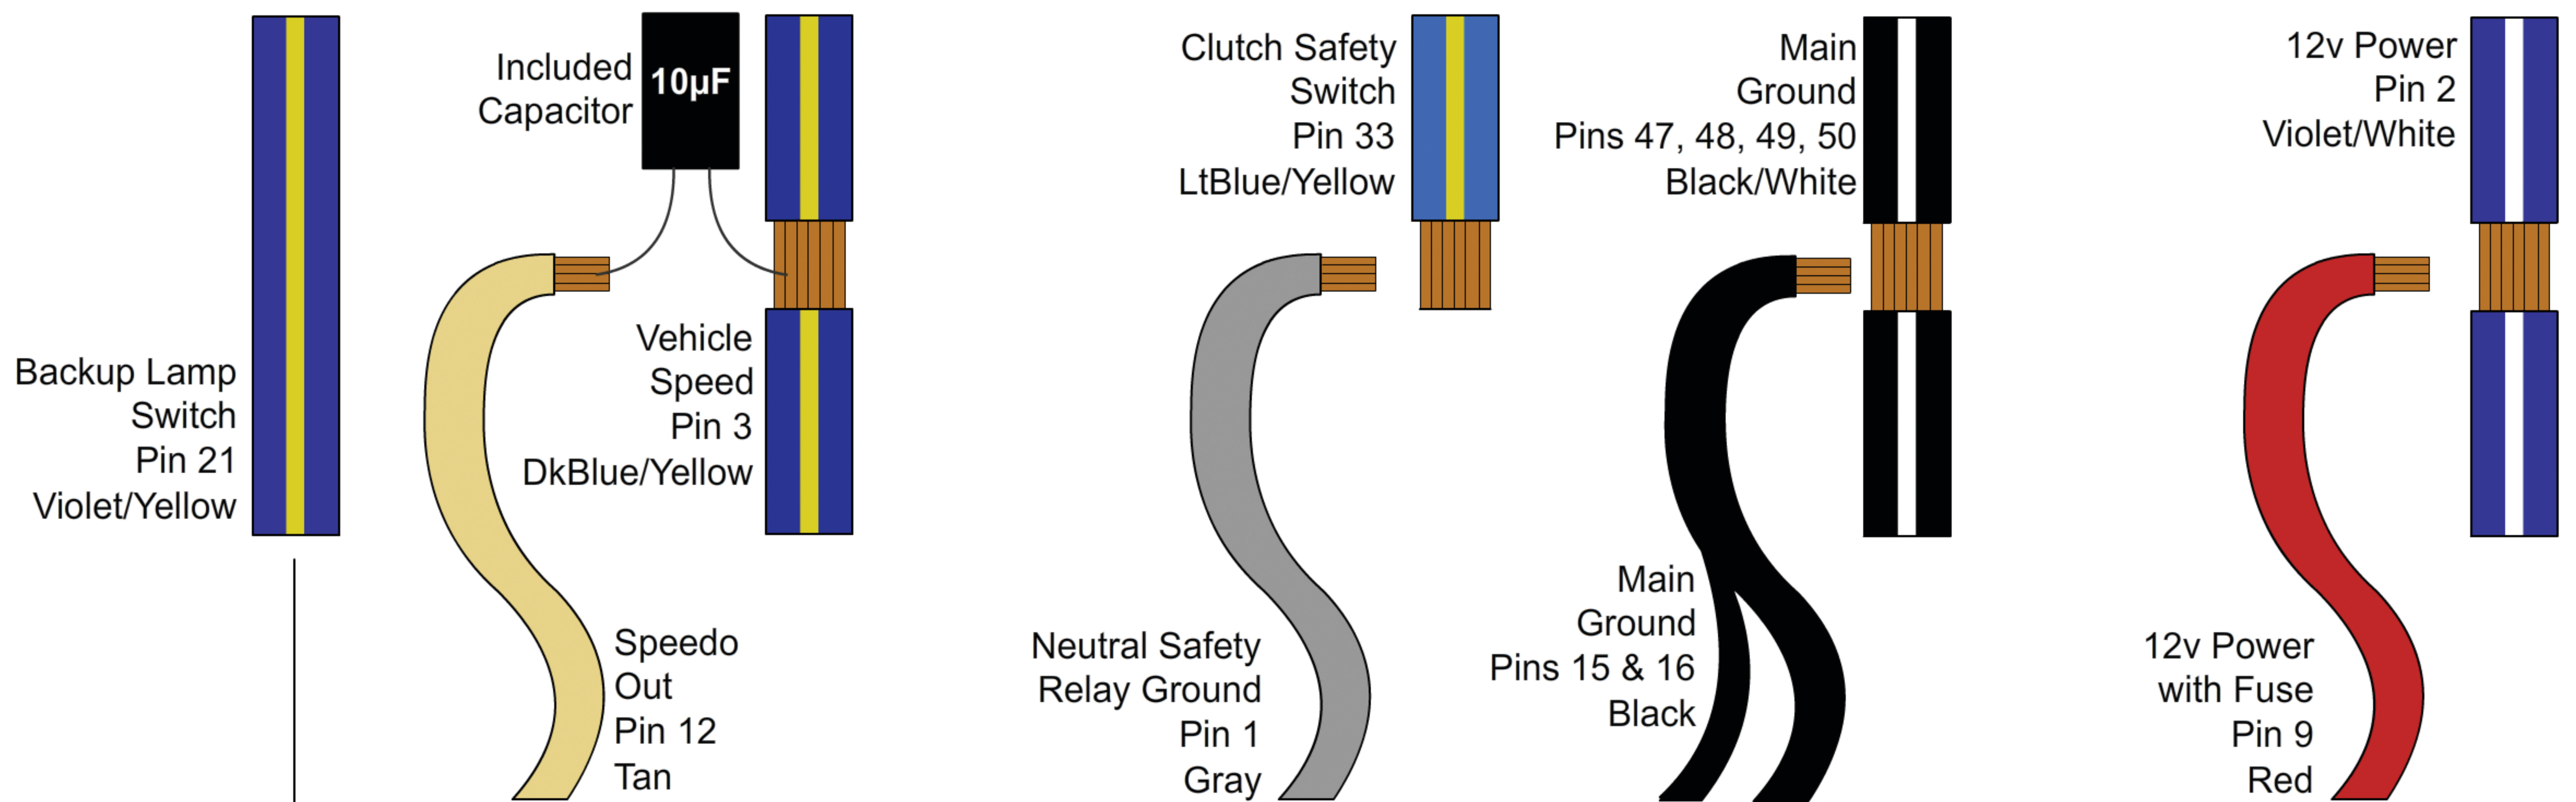
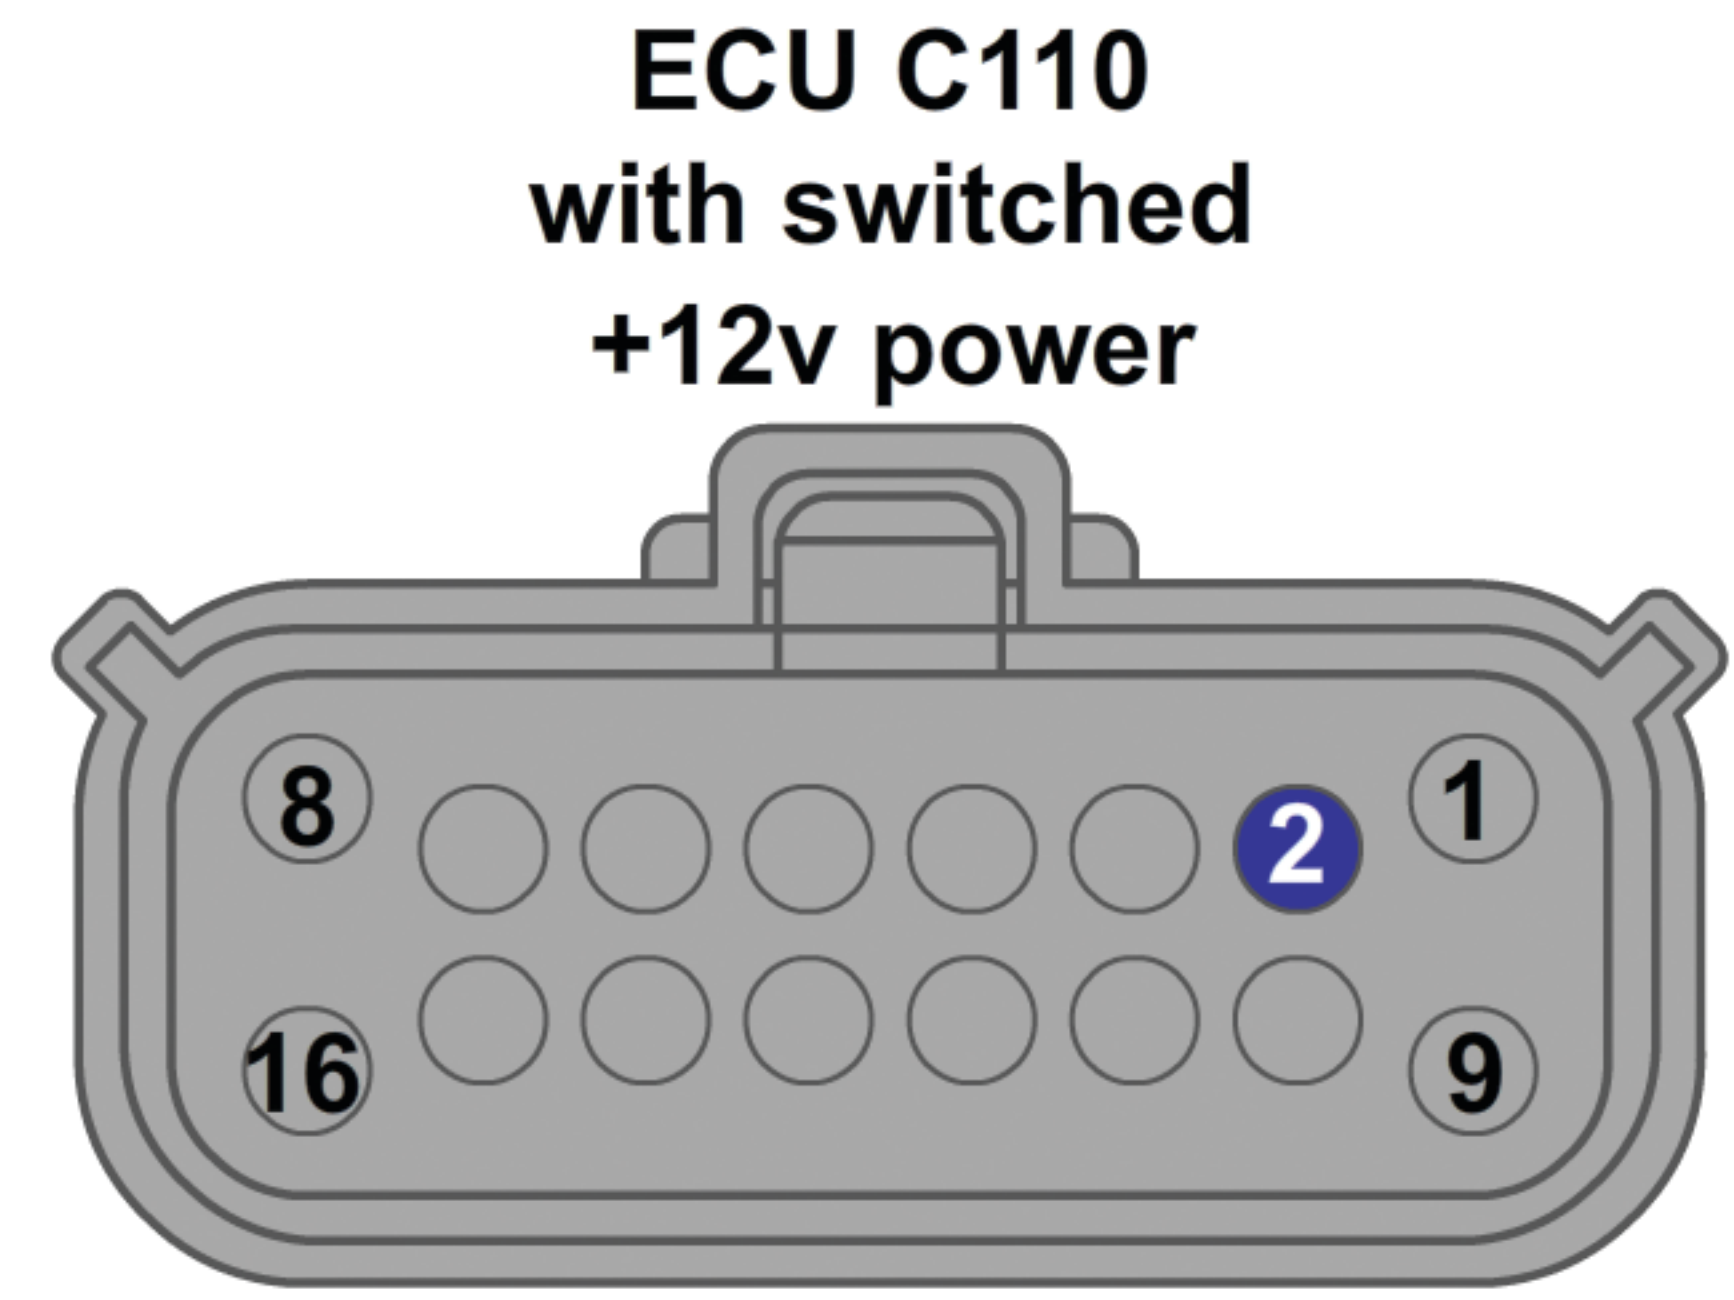
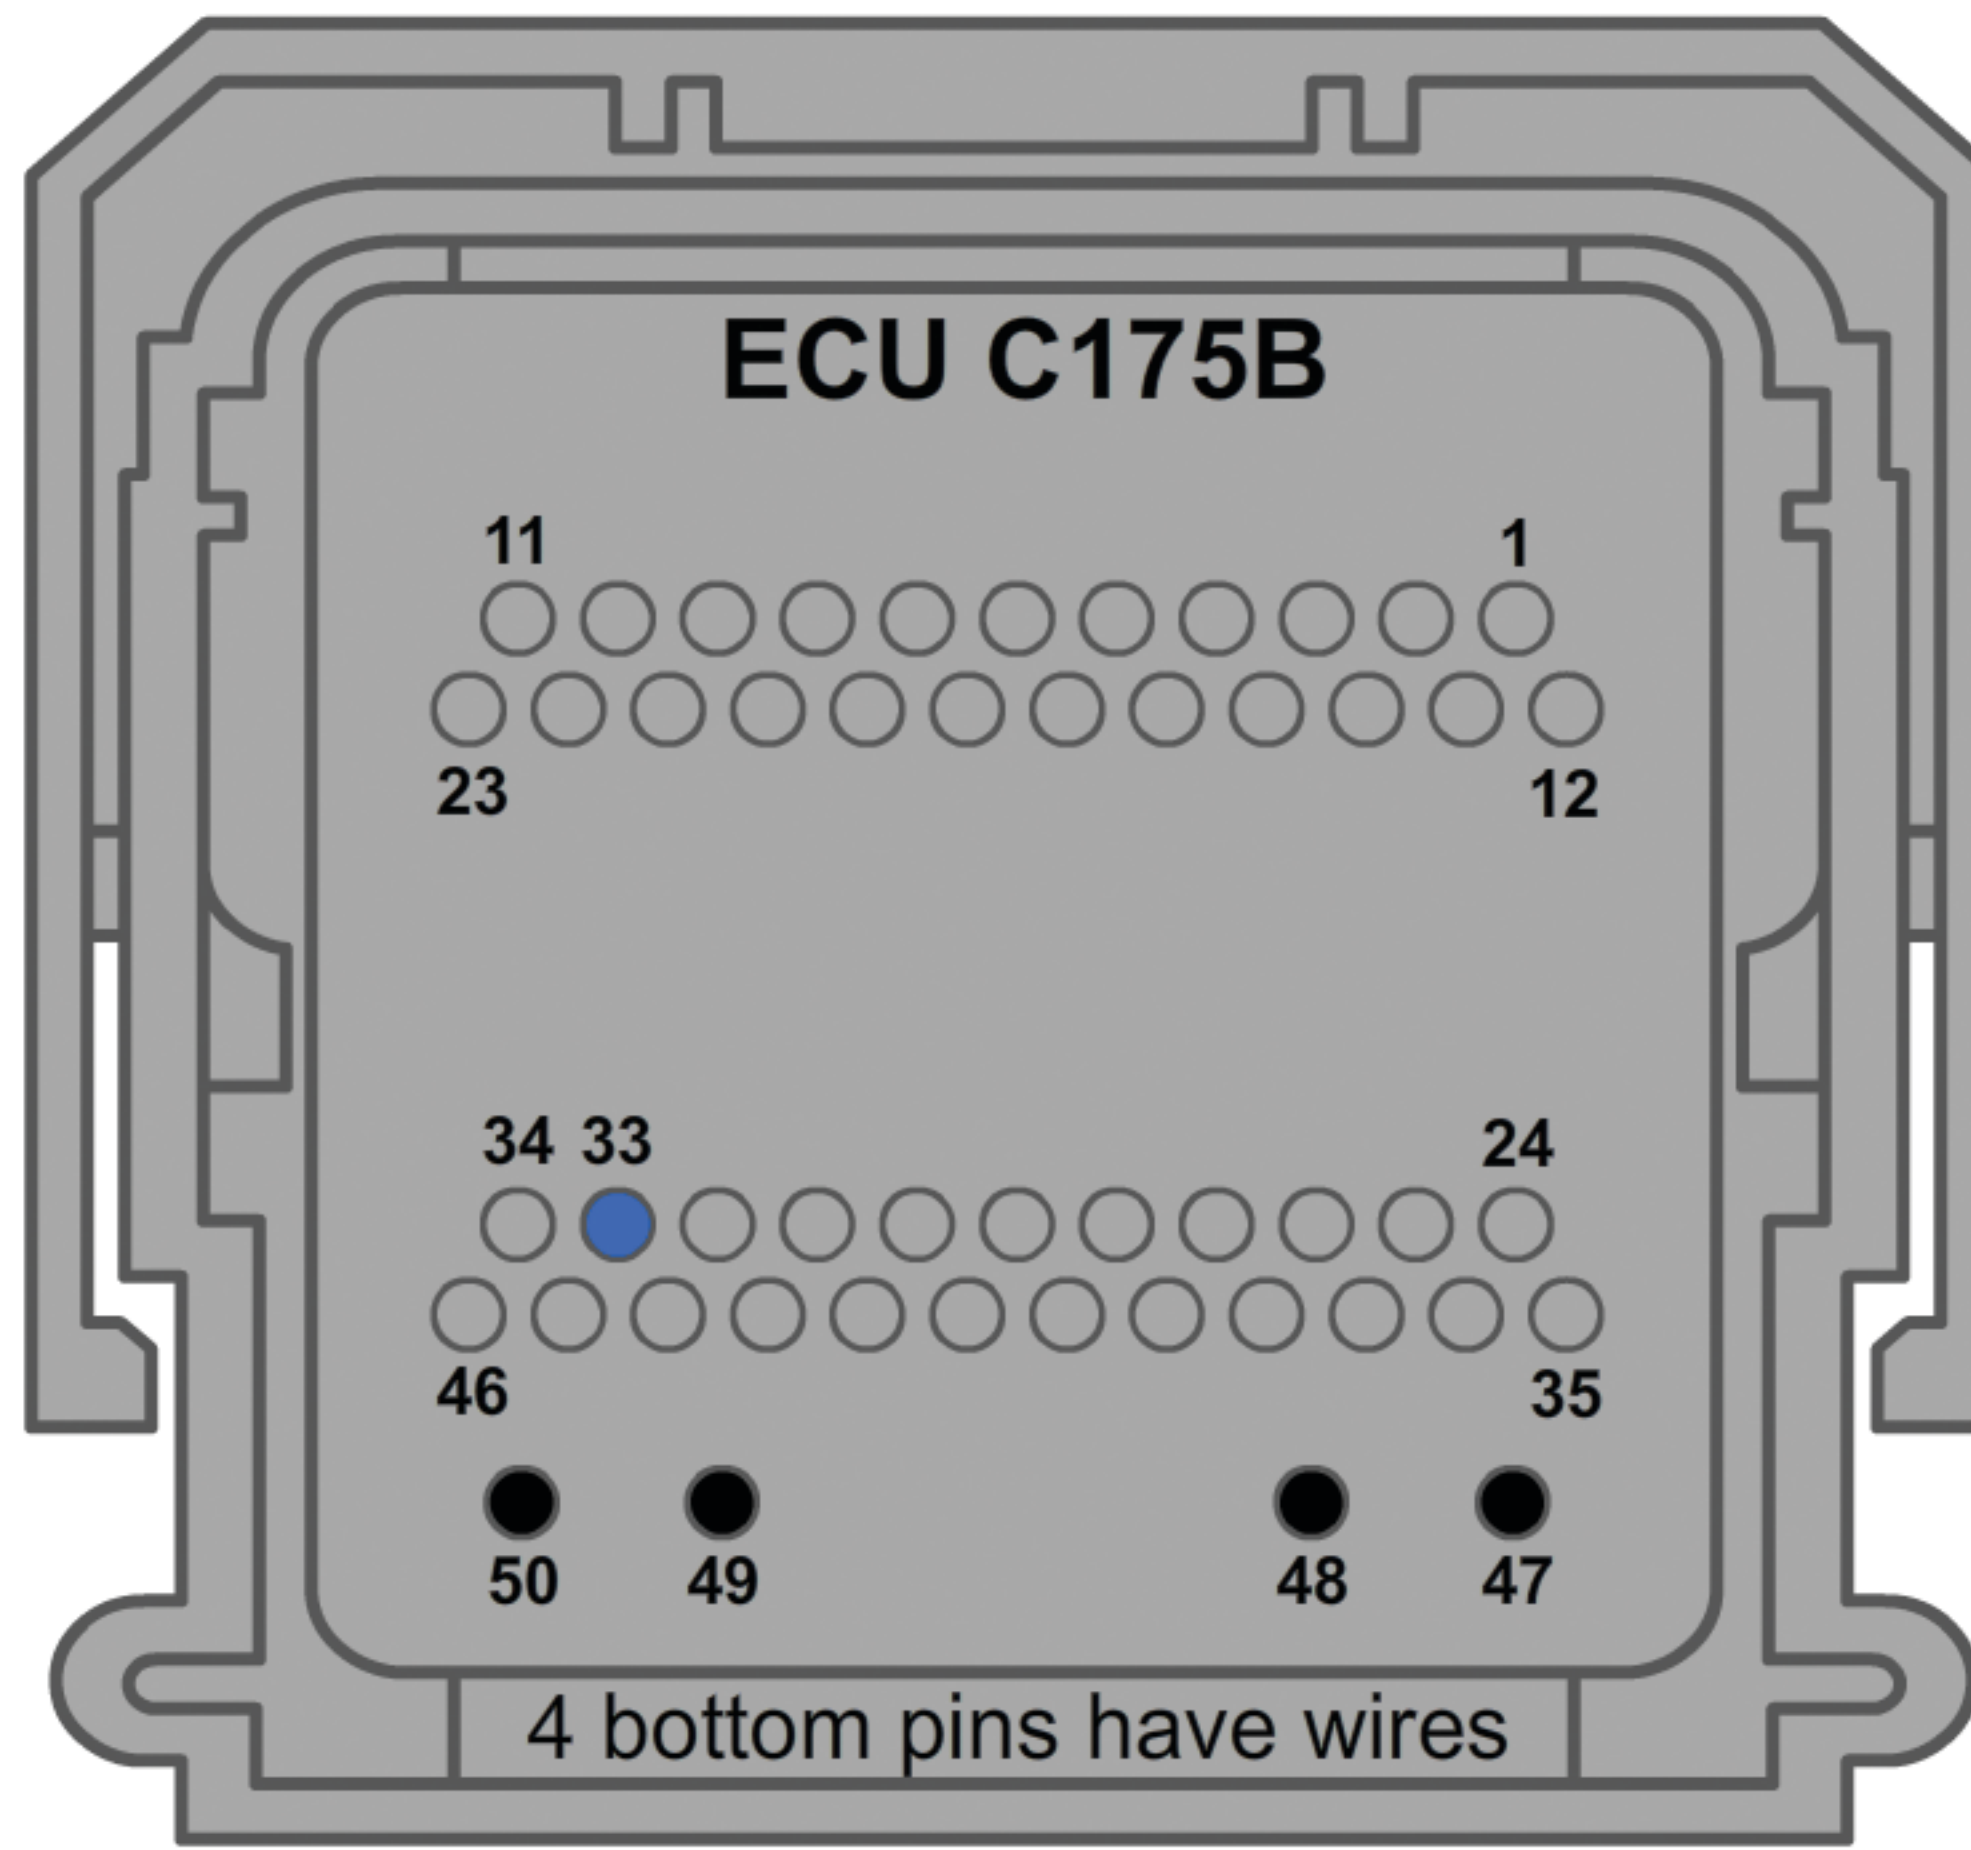


# 2005 - 2009 Mustang GT500

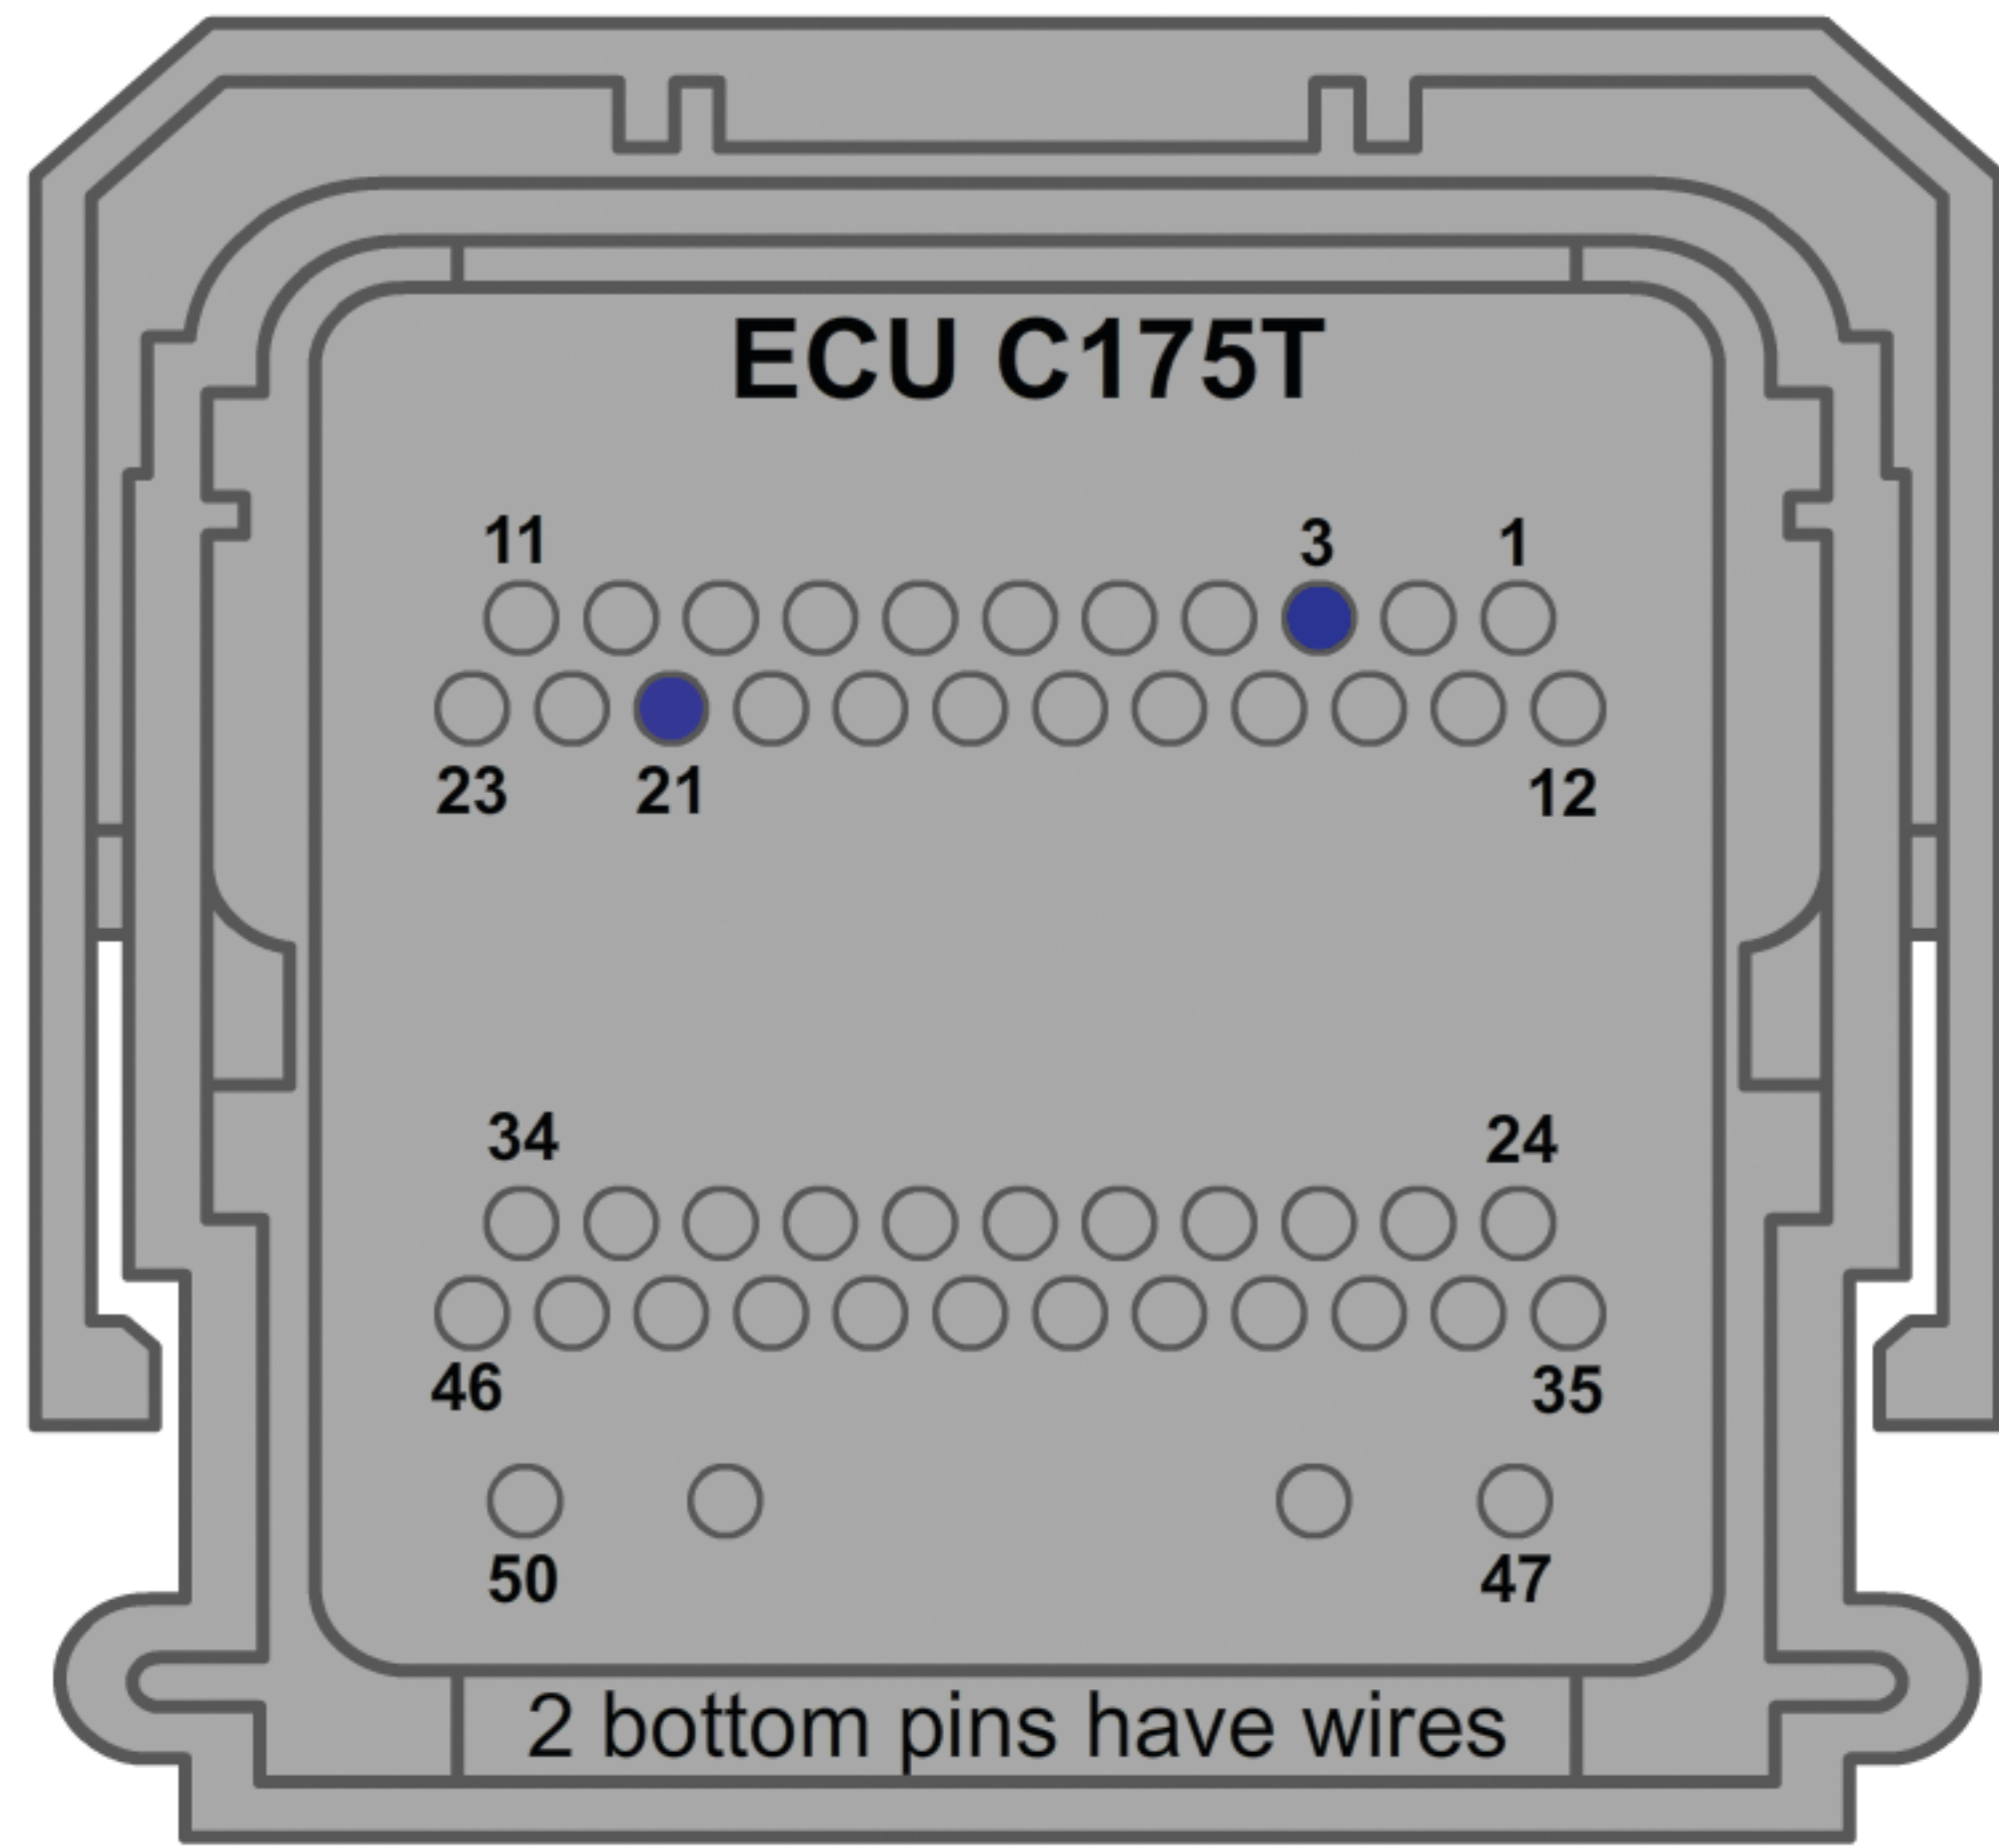


Connect according to the accompanying diagram

**16-Pin Vehicle Connector**

BACK VIEW (FRONT PLUGS IN, WIRES COME OUT OF THE BACK)


<b>16</b> ● <b>Black</b>	<b>15</b> ● <b>Black</b>	<b>14</b>	<b>13</b>	<b>12</b> ● <b>Tan</b>	<b>11</b>	<b>10</b> ● <b>Pink</b>	<b>9</b> ● <b>Red</b>
<b>8</b>	<b>7</b> ● <b>Yellow</b>	<b>6</b>	<b>5</b>	<b>4</b>	<b>3</b> ● <b>Green</b>	<b>2</b>	<b>1</b>

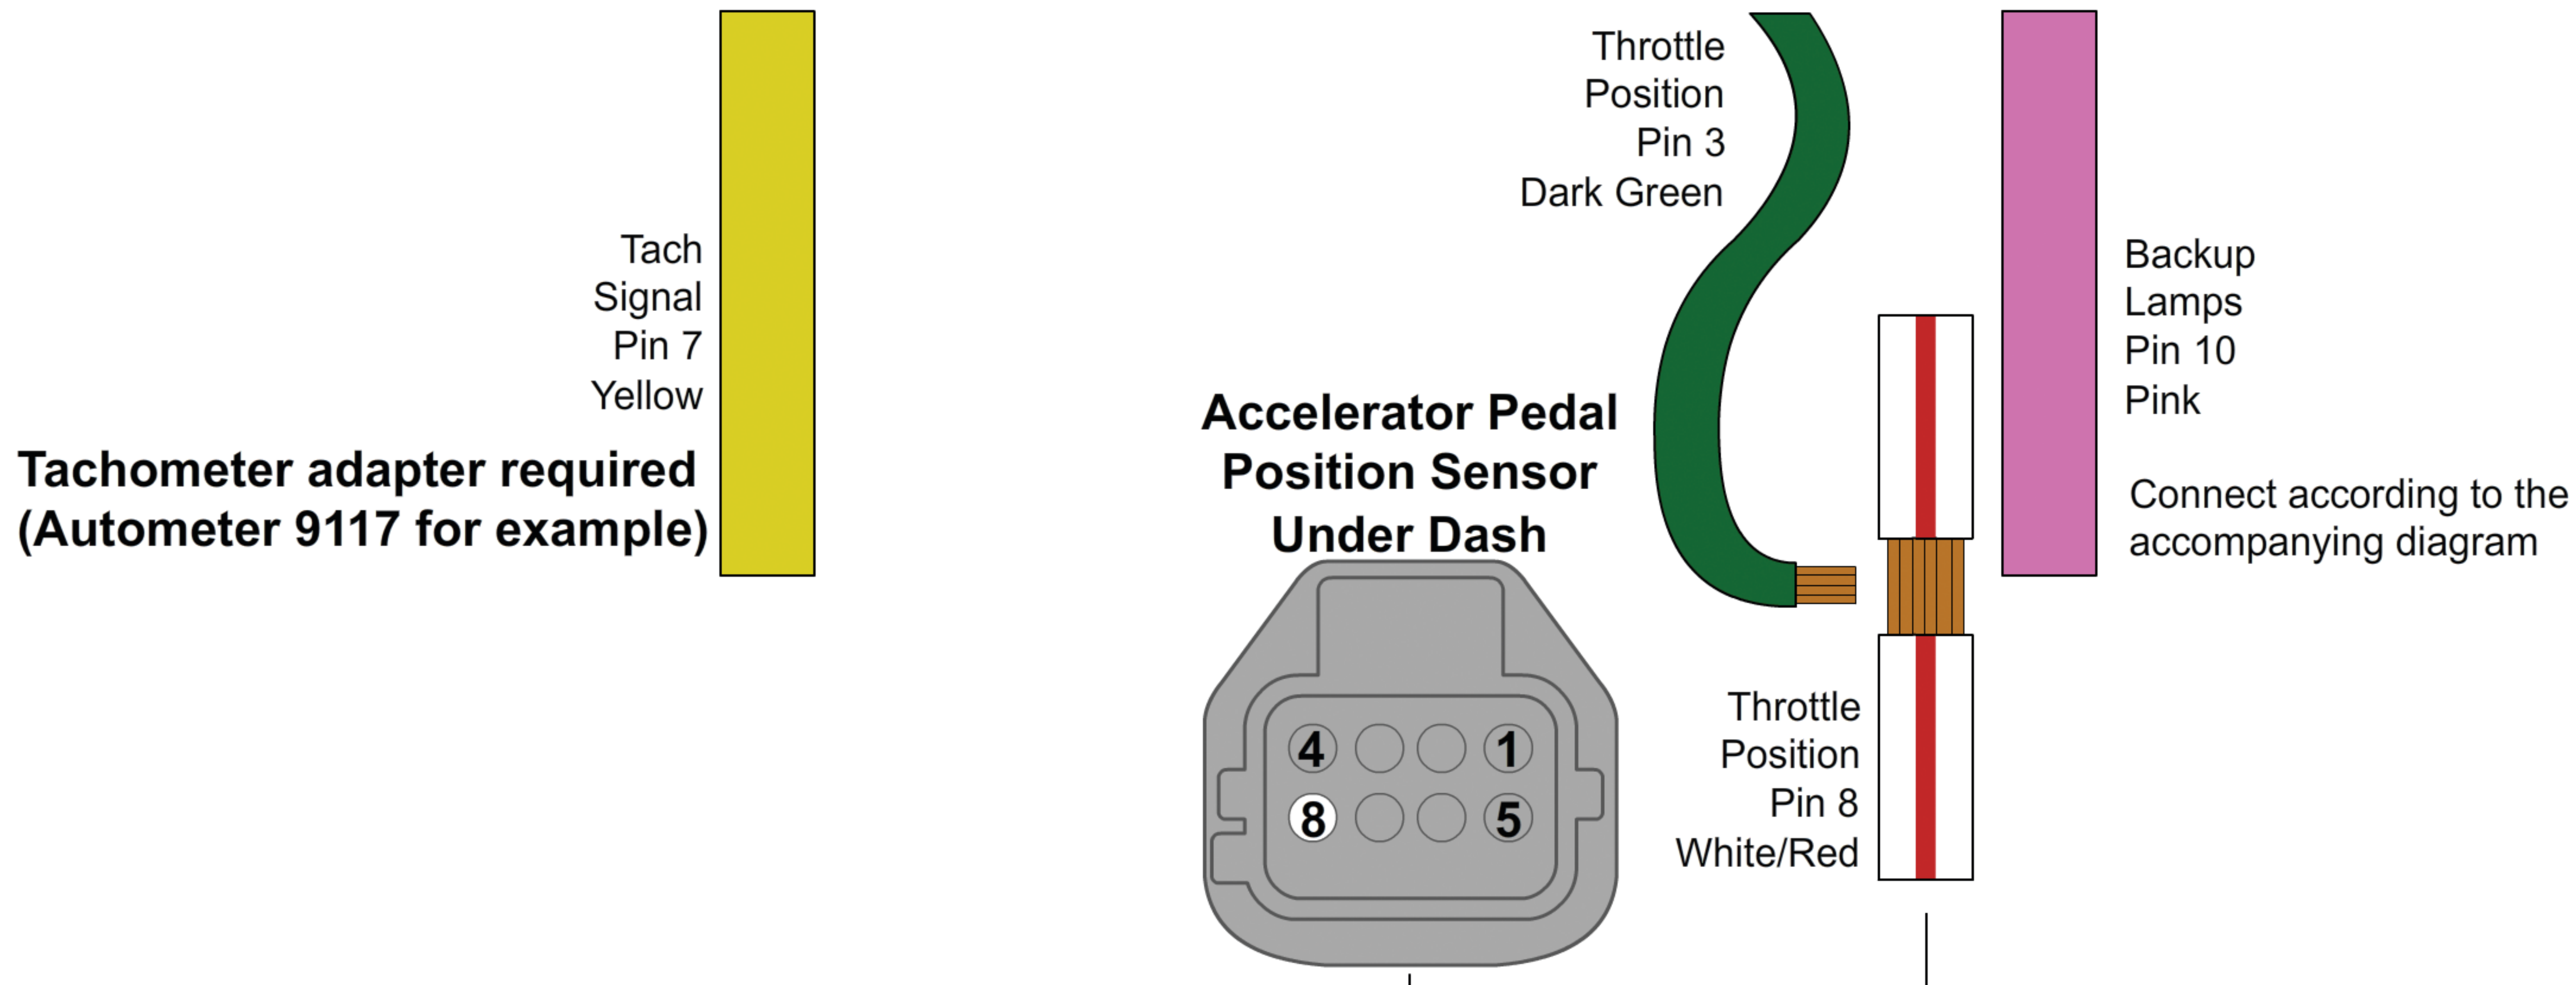

**Connecting the speedo out**  
See the installation manual's "Optional Features" section for more details.



# 2005 - 2009 Mustang Connector Locations

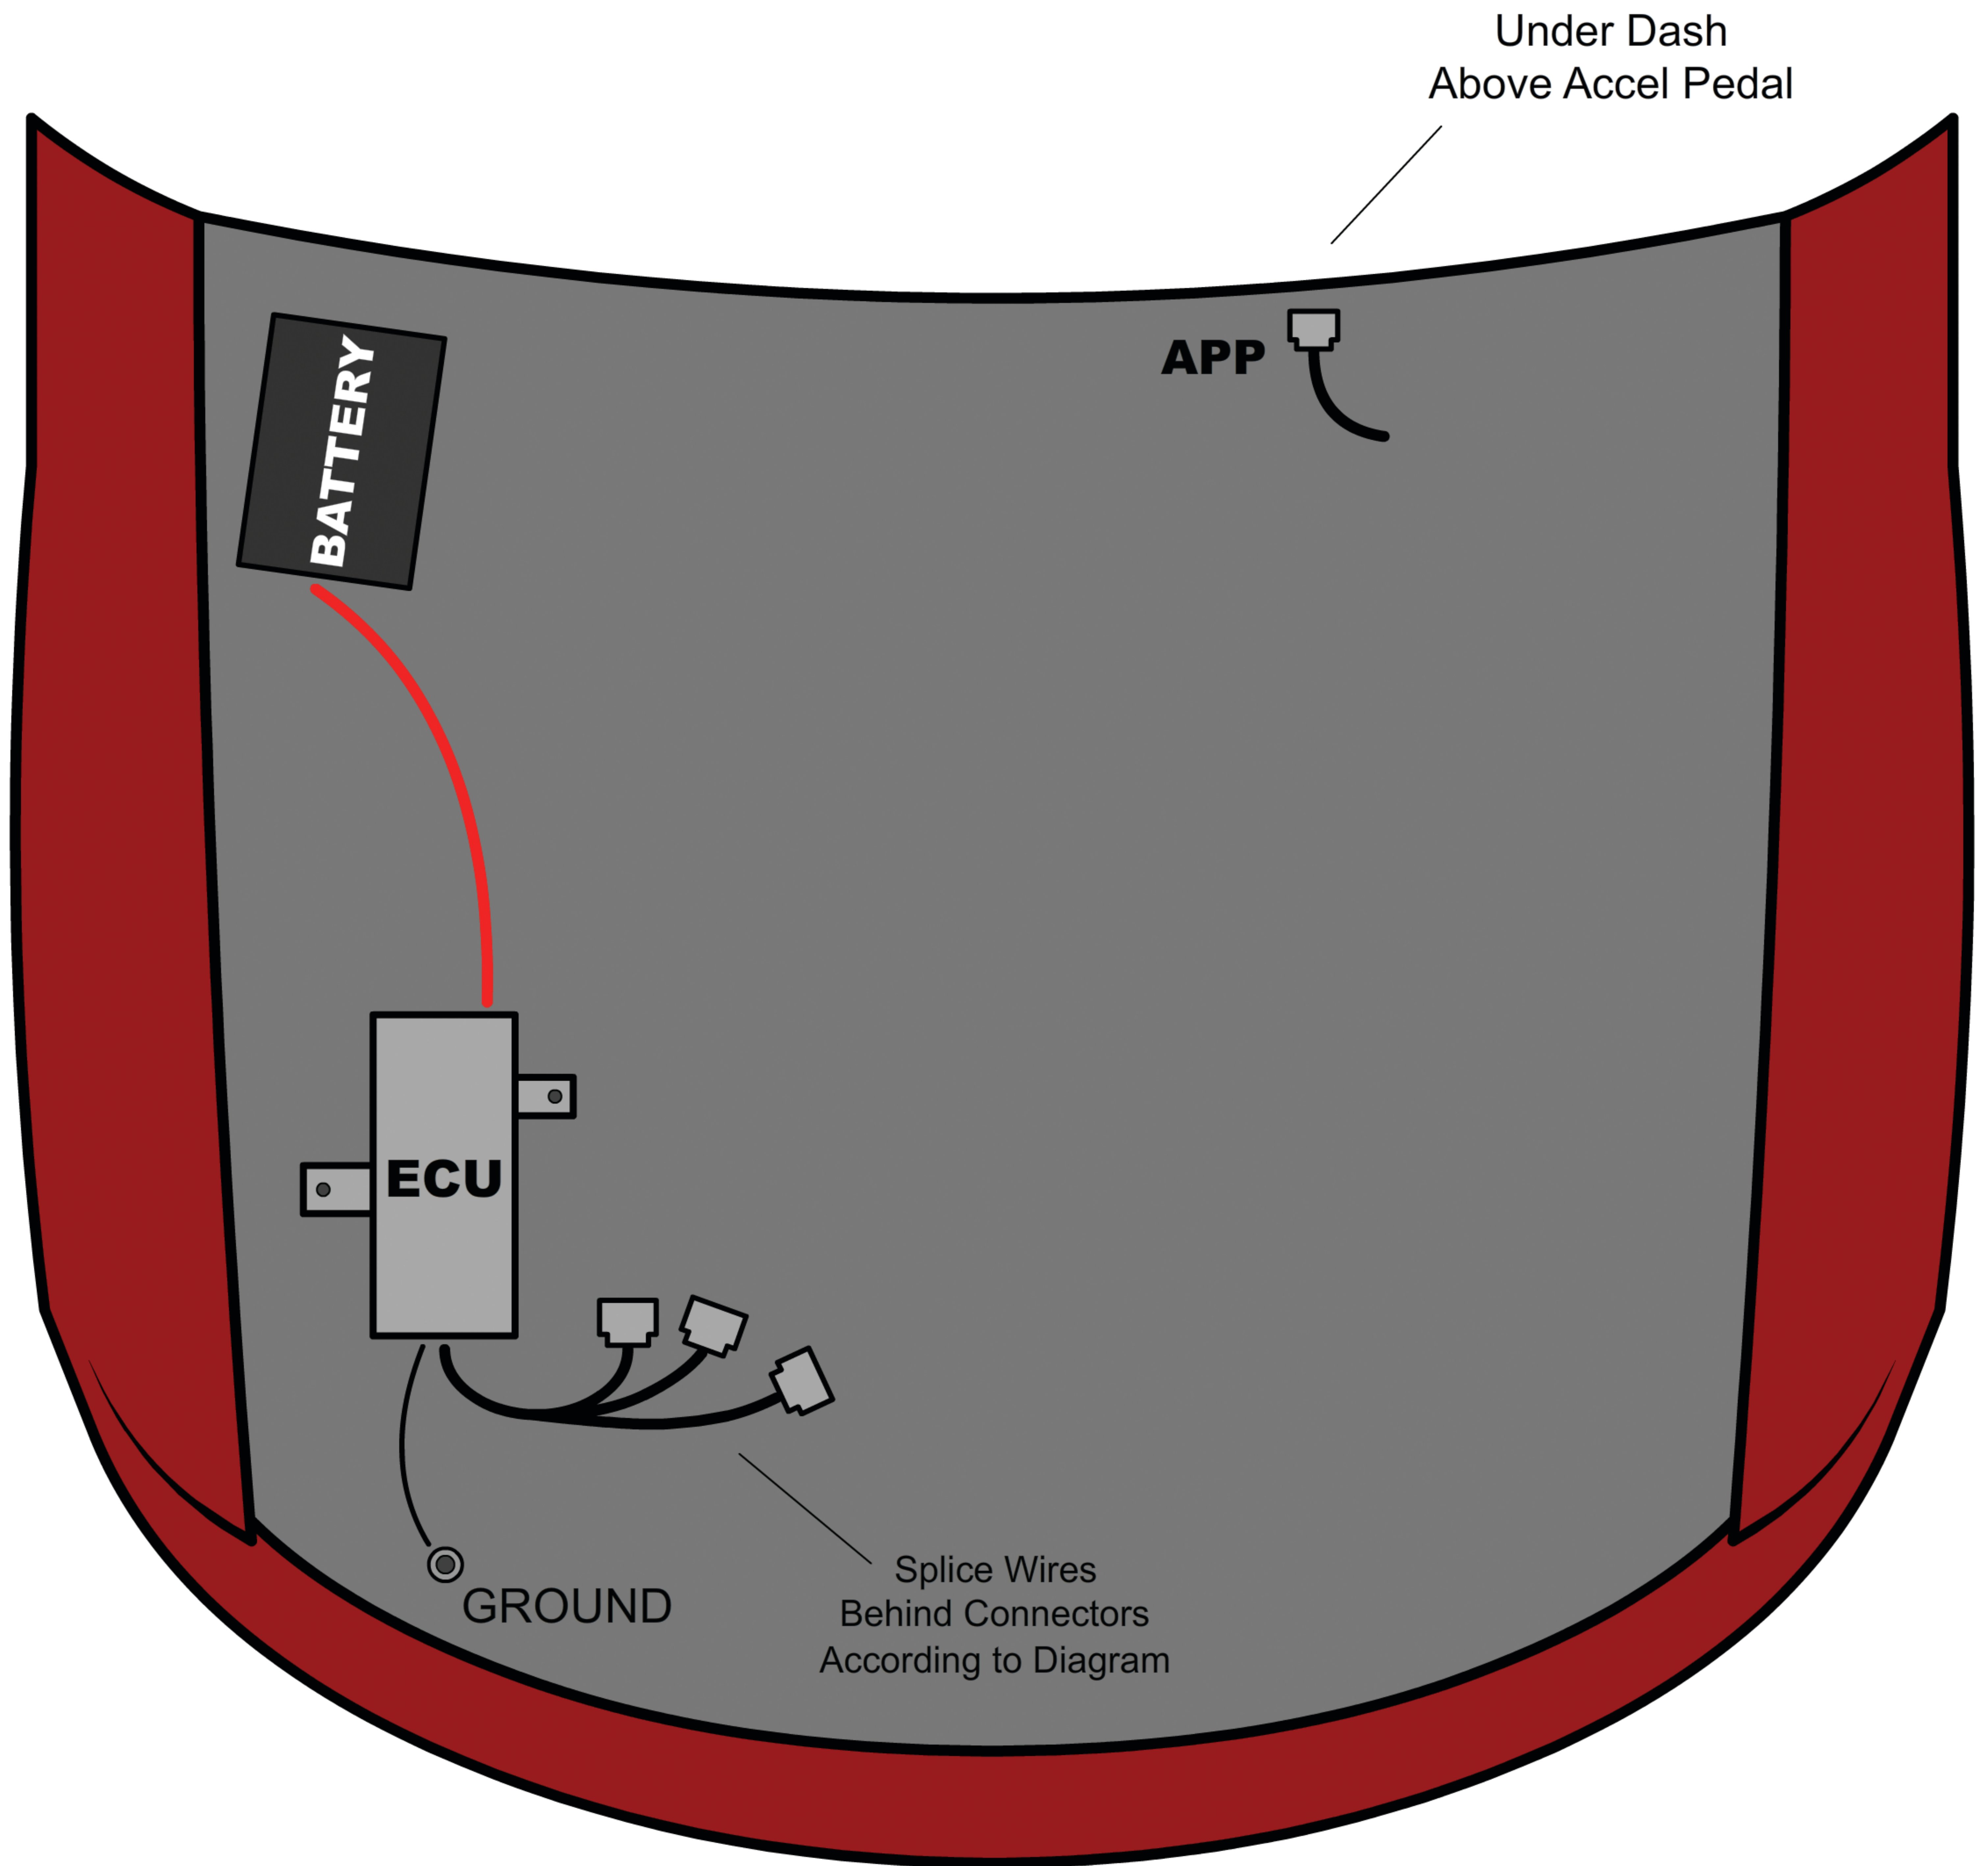



# Quick 6 Backup Lamp Relay

for 2005 - 2009 Mustang  
(Including GT500)

